

Vacless SVRS Maintenance and Testing

1. Maintenance (Use Kit P/N VAC55):

- a. Check to insure the piston (item 1) is functioning properly by pushing the piston protruding pin (item 2) few times. The piston should move freely with reasonable finger pushes.
- b. For sluggish piston; lubricate the piston O-ring using the provided lubrication dropper bottle P/N VAC50 by squeezing few drops equally spaced thru the small perforations (item 3) and evenly spread the lubricant to wet the O-ring by cycling (pushing) the piston several times.
- c. Repeat step “a”. If the piston is still sluggish or sticking, remove the valve from the pump, remove the two screws (item 4); disassemble the cap (item 5), remove the piston from the cap, clean & lubricate the piston O-ring, clean & lube the inside of the cap, reinstall the spring and reassemble the valve using fresh Teflon tape or Teflon paste (if needed).
- d. Repeat step “a”. If the piston is still sluggish or sticking, please call Vacless technical support at (818)899-1755.
- e. During the pool floor vacuuming use the provided red plug to maintain the cleaner's elevated vacuum level. Start the pump then install the plug after the piston is depressed.

Warning: The red plug must be removed after vacuuming.

2. Testing:

After servicing as shown above, perform **monthly** tests per the device “Users Manual” paragraph #6

